

Manufacturer	Type	Models	Adapter
Acer	Notebook	Aspire: 3000, 3500, 3600, 3610, 3624, 3630, 3680 Series	<u>STANDARD</u>
	Notebook	Aspire: 2000, 2010, 2020, 2200 Series	<u>STANDARD</u>
	Notebook	Aspire: 3020, 3025, 3040, 3620, 3690 Series	<u>STANDARD</u>
	Notebook	Aspire: 5000, 5020, 5030, 5040, 5100, 5110, 5500, 5600, 5610, 5630, 5680, 5920, 7100, 9100 Series	<u>STANDARD</u>
	Notebook	Aspire: 5010, 5012, 5014, 9800, 9805, 9810 Series	<u>STANDARD</u>
	Notebook	Aspire: 7000, 9300, 9410, 9420, 9500 Series	<u>STANDARD</u>
	Notebook	Ferrari: 1000, 1004, 3000, 3200, 3400, 4000, 5000 Series	<u>STANDARD</u>
	Notebook	TravelMate: A550, A551, Alpha 550, Alpha 551 Series	<u>STANDARD</u>
	Notebook	TravelMate: C100, C110, C200, C210, C300, C310 Series	<u>STANDARD</u>
	Notebook	TravelMate: 200, 210, 212, 213, 220, 225, 230, 233, 260, 270, 272, 273, 280, 283 Series	<u>STANDARD</u>
	Notebook	TravelMate: 240, 243, 244, 250, 252, 253, 290, 291, 292, 293 Series	<u>STANDARD</u>
	Notebook	TravelMate: 530, 531, 533, 534, 535, 536 Series	<u>STANDARD</u>
	Notebook	TravelMate: 540, 541, 542, 543 Series	<u>STANDARD</u>
	Notebook	TravelMate: 600, 603, 610, 611, 612, 613, 614, 620, 630, 631, 650, 653, 654, 660 Series	<u>STANDARD</u>
	Notebook	TravelMate: 720, 722, 730, 732, 735, 739, 740, 800, 801, 802, 803, 804 Series	<u>STANDARD</u>
	Notebook	TravelMate: 2000, 2100, 2200, 2500, 2600, 2700 Series	<u>STANDARD</u>

	Notebook	TravelMate: 2300, 2310, 2350, 2400, 2420, 2450, 2480 Series	<u>STANDARD</u>
	Notebook	TravelMate: 3000, 3200, 3210, 3220, 3230, 3260 Series	<u>STANDARD</u>
	Notebook	TravelMate: 5100, 5110, 5300, 5600, 5610, 5612, 6000, 6100, 6410, 6460, 6592 Series	<u>STANDARD</u>
	Notebook	TravelMate: 7000, 7100, 7300, 8000, 8100, 8200, 8204, 8205, 8210, 8215, 8216 Series	<u>STANDARD</u>
AGFA	Digital Cameras	307, 780, 1280, 1680, 780C, CL-18, CL-30, CL-50	<u>STANDARD</u>
Aiwa	CD/MP3 Players	XP-K3, XP-R210	<u>STANDARD</u>
Apex	Portable DVD Players	PD-10, PD-100, PD-450, PD-510, PD-650S	<u>STANDARD</u>
Apple	iPod	1st Generation, 2nd Generation, 3rd Generation	Optional
	iPod	Mini, Nano 1st Generation, Nano 2nd Generation, Video 5th generation	Optional
	iPod	4th Generation, 5th Generation	Optional
	Notebook	PowerBook: 1400, 2400 series, 3400 series, G3	Optional
	Notebook	PowerBook: G4	Optional
	Notebook	iBook: G4	Optional
Archos	AV Jukebox	AV420, AV480	<u>STANDARD</u>
	AV Jukebox	AV120, AV140, AV320, AV340, AV380, AV700	<u>STANDARD</u>
	CD/MP3 Players	Jukebox Multimedia: 10, 20, Gmini120	<u>STANDARD</u>
Asus	Notebook	M6B00N	<u>STANDARD</u>
Audiovox	Mobile Phones	8400, 8410, 8610, 8900	<u>STANDARD</u>
	Mobile Phones	8400, 8410, 8450, 8455, 8615, 8900, 8910, 8912, 8915, 8920, 8940, 9900, 9950, CDM-8425, CDM8400, CDM8410, CDM8425, CDM8450, CDM8455, CDM8610,	<u>STANDARD</u>

		CDM8615, CDM8900, CDM8910, CDM8912, CDM8915, CDM8920, CDM8940, CDM9900, CDM9950, Flasher, Toshiba, V7, VI-660, VI600, VM4050	
	Portable DVD Players	D1020, D1420, D1420HP, D1500, D1500A, D1500B, D1501, D1510, D1530, D1680, D1700, D1705, D1708, D1708PK, D1730, D1800, D1812, D1812PK, D1830, DV-1680, PE702, VBP50, VBP700	STANDARD
	Portable DVD Players	1710	Optional
Averatec	Notebook	2100, 2150, 2150-EH1, 2155, 2155-EH1, 2200, 2225, 2225-EH1, 2260, 2260-EH1, 2260-EK1, 2260-EY1, AV2100, AV2150, AV2150-EH1, AV2155, AV2155-EH1, AV2200, AV2225, AV2225-EH1, AV2260, AV2260-EH1, AV2260-EK1	STANDARD
	Notebook	Avaratec AV3715-EH1	STANDARD
	Notebook	1000, 1020, 1020-ED1, 3000, 3120, 3120V, 3150, 3150H, 3150HW, 3150Hd, 3150Hs, 3150P, 3200, 3220, 3220H1, 3225, 3225HS, 3250, 3250H1, 3250HS, 3250HX, 3250PX, 5100, 5110H, 6200, AV1000, AV1020, AV1020-ED1, AV3220, AV3220H1, AV3225, AV3225HS, AV3250, AV3250H1, AV3250HS, AV3250HX, AV3250PX, C3500	STANDARD
BlackBerry	Smart Phone	6210 6220 6230 6280 6510 7100g 7100i 7100r 7100t 7100v 7100x series 7105t 7130c 7130e 7210 7230 7250 7280 7290 7510 7250 8100c 8700f 8700g 8703e	Optional
Camedia	Digital Cameras	C-8080, D-395, D-540, D-580	STANDARD
Canon	Camcorders	Elura 85	STANDARD
	Digital Cameras	PowerShot: A10, A100, A20, A200, A30, A300, A40, A60, A70, A75, IXUS V, S100, S110, S200, S230, S30, S300, S330, S400	STANDARD
Casio	Digital Cameras	EX-S1, Exilim EX-Z40, QV-100, QV-10A, QV-11, QV-120, QV-200, QV-2000UX, QV-2300UX, QV-2800UX, QV-2900UX, QV-300, QV-3000EX, QV-3000EX+, QV-3500EX, QV-	STANDARD

		4000, QV-4000EX, QV-5000SX, QV-5500SX, QV-5700, QV-70, QV-700, QV-7000SX, QV-770, QV-780, QV-8000SX, QV-R3, QV-R4	
	PDA	Cassiopeia: BE-300, E-100, E-105, E-115, E-125, EG-800STD, EM-500	<u>STANDARD</u>
Classic	CD/MP3 Players	CL157, CL413, CL450, CM544	<u>STANDARD</u>
Coby	CD/MP3 Players	CX-CD10, CX-CD303, CX-CD307	<u>STANDARD</u>
	Portable DVD Players	TF DVD-500, TF DVD-5000, TF DVD-7100, TF DVD-8500	<u>STANDARD</u>
Connections	CD/MP3 Players	HD003	<u>STANDARD</u>
Creative	CD/MP3 Players	Zen: Micro, MicroPhoto, V, V Plus	Optional
Curtis	CD/MP3 Players	CD048e	<u>STANDARD</u>
Cyber Home	Portable DVD Players	CH-LDV1010B, CH-LDV7000, CH-LDV700B, CH-LDV702B, CH-LDV707B, CH-LDV712	<u>STANDARD</u>
	Portable DVD Players	CH-LDV700B, CH-LDV712	<u>STANDARD</u>
DELL	Notebook	1000, 100L, 110L, 1200, 120L, 1300, 2200, 3000, 3200, 3500, 7000, B120, B130	<u>STANDARD</u>
	Notebook	Latitude: D400, D410, D420, D500, D505, D510, D520, D531, D600, D610, D620, D630, D631, D800, D810, D820, D830, X1, X300 Series	Optional
	Notebook	Inspiron: 300m, 500m, 600m, 630m, 640m, 700m, 710m Series	Optional
	Notebook	Inspiron: 1100 Series	Optional
	Notebook	Inspiron: 4000, 4100, 4150, 4200, 5000, 5100, 5150 Series	Optional
	Notebook	Inspiron: 6000, 6400 Series	Optional
	Notebook	Inspiron: 7500, 8000, 8100, 8200 Series	Optional
	Notebook	Inspiron: 1150, 1420, 1501, 1520, 1521 Series	Optional
	Notebook	Inspiron: 8500, 8600, 9100 Series	Optional

	Notebook	Inspiron: E1405, E1505 Series	Optional
	Notebook	Inspiron: 1720, 1721, 9200, 9300, 9400, E1705 Series	Optional
	Notebook	Precision: M20, M60, M65, M70 Series	Optional
	Notebook	Vostro: 1000, 1400, 1500, 1700 Series	Optional
	Notebook	XPS: M1210, M1330, M140 Series	Optional
	PDA	Axim: x50, x50v, x51, x51v	<u>STANDARD</u>
DELL (NOT COMPATIBLE)	Notebook (NOT COMPATIBLE)	Gen2, M170, M1710, M90	(NOT COMPATIBLE)
Eddie Bauer	Portable DVD Players	PE702, PE802	<u>STANDARD</u>
Epson	Digital Cameras	PhotoPC: 3000Z, 3100Z, 550, 600, 650, 700, 750Z, 850Z	<u>STANDARD</u>
Fostex	Field Recorder	FR2	Optional
FujiFilm	Digital Cameras	DX-10, MX1200, MX1400, MX1500, MX1700, MX2700, MX2900, MX2900Z, MX500, MX600Z, MX700	<u>STANDARD</u>
	Digital Cameras	1300, 1400, 1700, 2300, 2400, 2600, 2600Z, 2650, 2700, 2800, 2900, 3800, 4700, 4700Z, 4800, 4900, 6800, 6900, A330, E500, E510, F401, F601, F700, FinePix 1200, S3000, S602	<u>STANDARD</u>
	Digital Cameras	40i, 50i, A101, A200, A201, A203, A303, FinePix 30i	<u>STANDARD</u>
Fujitsu	Notebook	LifeBook: A4170, A4177, A4178, A4187, A4190 Series	<u>STANDARD</u>
	Notebook	LifeBook: B2130, B2131, B2175, B2545, B2562, B2566, B2610, B2620, B2630, B3000, B3000D, B3010D, B3020, B3020D, B6110D, B6210, B6220 Series	<u>STANDARD</u>
	Notebook	LifeBook: C2010, C2110, C2111, C2210, C2310, C2320, C2330 Series	<u>STANDARD</u>
	Notebook	LifeBook: C-6581, C-6591, C-6611, C-6631, C-6651, C-7631, C-7651,	<u>STANDARD</u>

		C-7661 Series	
	Notebook	LifeBook: E6550, E6555, E6556, E6557, E6570, E6571, E6575, E6595 Series	<u>STANDARD</u>
	Notebook	LifeBook: E6624, E6634, E6644, E6654, E6664, E6666, E7010, E7110, E8010, E8010D, E8020, E8020D, E8110, E8210, E8310 Series	<u>STANDARD</u>
	Notebook	LifeBook: N3000, N3010, N3511, N3520, N3530, N5000, N5010, N6010, N6110, N6210, N6410, N6420 Series	<u>STANDARD</u>
	Notebook	LifeBook: P1000, P1032, P1035, P1120, P1510, P1510D, P1610, P5000, P5010, P5010D, P5020, P5020D, P7010, P7010D, P7120, P7230, P7230D, P7230P Series	<u>STANDARD</u>
	Notebook	LifeBook: Q2010, S2010, S2020, S2110, S6010, S6110, S6120, S6120D, S6210, S6220, S6231, S6240 Series	<u>STANDARD</u>
	Notebook	LifeBook: S2210, S6310, S6311, S6410, S7000, S7000D, S7010, S7010D, S7020, S7020B, S7020D, S7020E, S7021, S7025, S7110, S7111 Series	<u>STANDARD</u>
	Notebook	LifeBook: T4010, T4010D, T4210, T4215, T4220 Series	<u>STANDARD</u>
	Notebook	Stylistic: ST4110, ST4110P, ST4120, ST4120P, ST4121, ST5000, ST5000D, ST5010, ST5010D, ST5011, ST5011D, ST5020, ST5020D, ST5021, ST5021D, ST5022, ST5022D, ST5030, ST5030D, ST5031, ST5031D, ST5032, ST5032D, ST5111, ST5112 Series	<u>STANDARD</u>
	Notebook	Stylistic: T2010, T3010, T3010D Series	<u>STANDARD</u>
Garmin	GPS	Edge: 205, 301, 305, C340, i2, i3, i5	Optional
	GPS	NUVI: 300, 310, 350, 360, 60CSX	Optional
	PDA	iQue 3600	<u>STANDARD</u>

Gateway	Notebook	200 series	Optional
	Notebook	MX3560, MX3560h, MX3562, MX3563, MX3563h	<u>STANDARD</u>
	Notebook	3500 series	<u>STANDARD</u>
	Notebook	3520 Series	<u>STANDARD</u>
	Notebook	3520GZ Series	<u>STANDARD</u>
	Notebook	1100, 1150, 1200, 1400, 1450, 2150, 2500, 2550, 3100, 3150, 3300, 3350, 400SD4, 400VTX, 450ROG, 450SX4, 5150, 5300, 5350, 600YG2, 600YGR, 9100, 9150, 9300, 9500, 9550, M1200, M1300, M275, M305, M305CRV, M405, M500	<u>STANDARD</u>
	Notebook	7000 Series	<u>STANDARD</u>
Hiptop	Smart Phone	Sidekick: 1, 2, 3	<u>STANDARD</u>
Hitachi	DVD Camcorder	DZMV200A	Optional
Holux	GPS	236	Optional
HP (NOT COMPATIBLE)	Notebook (NOT COMPATIBLE)	ZV5000, ZV5330, ZV5330CA, ZV5330US	(NOT COMPATIBLE)
HP/Compaq	Digital Cameras	HP Photosmart: 215, 215xi, 312, 315, 315xi, 318, 320, 433, 435, 612, 618, 620, 635, 715, 720, 850, 945, C200, C200xi, R707	<u>STANDARD</u>
	Notebook (Compaq)	Presario V2400 Series	<u>STANDARD</u>
	Notebook (Compaq)	Presario V2000 Series: V2000, V2000t, V2000z, V2001, V2002, V2003, V2004, V2005, V2006, V2007, V2008, V2009, V2010, V2010US, V2016, V2017, V2018, V2019, V2020, V2021, V2022, V2023, V2024, V2025, V2026, V2027, V2028, V2029, V2030, V2030US, V2031, V2032, V2033, V2034, V2035, V2036, V2037, V2038, V2039, V2040, V2040US, V2041, V2069, V2069CL.	<u>STANDARD</u>
	Notebook (Compaq)	Prosignia: 170, 190	<u>STANDARD</u>

	Notebook (Compaq)	Prosignia: 150	STANDARD
	Notebook (Compaq)	Armada: 110, E500, E500S, E700,M300, M700, V300	STANDARD
	Notebook (Compaq)	Evo: N110, N150, N200, N400c, N410c,N600c, N610c, N620C, N800c, N800v,N1000v, N1015v, N1020v,NC4000, NC6000, NC8000, NW8000, NX7000	STANDARD
	Notebook (Compaq)	Presario: 2800 series, 2900 series, 300, V1000 Series, V1100 Series, X1000 Series, X1200 Series, X1300 Series, X1460, X1480	STANDARD
	Notebook (Compaq)	Evo: N115, N160, N180	STANDARD
	Notebook (Compaq)	Presario: 1000 series, 1200 series, 12XL, 1400 series, 14XL, 1600 series, 1600i, 16XL, 1700 series, 17XL, 1800 series, 1800t, 18XL, 2700 series, 2700xx, 700 series, 800 series, X1001	STANDARD
	Notebook(HP)	Tablet: TC1000, TC1100	STANDARD
	Notebook(HP)	Desktop Notebooks: NW8000, NC8000	STANDARD
	Notebook(HP)	Business Notebooks: NC4000, NC4010,NC6000, NX7000, NX7010	STANDARD
	Notebook(HP)	Omnibook: 300, 425, 430, 500, 510, 530, 900, 2000, 2100, 2103, 2105, 3000, 3100, 3101, 4000, 4100, 4101, 4103, 4105, 4150, 5000, 5500, 5700, 6000, 600c, 600ct, 6100, 7100, 7103, 7150, 900b, Xe, Xt1000, vt6200, xe2, xe3, xe4100, xe4200, xe4400, xe4500, xt1500, xt6050, xt6200	STANDARD
	Notebook(HP)	Pavilion: 2105, 3101, 4101, 4103, 4105, 5159, DV1000, DV1010, DV1100, DV1130, DV4000, DV4040US, DV6000, DV6000t, DV6000z CTO Series, DV6040, DV6040CA, DV6040US, DV6045, DV6045NR, DV6058, DV6058CL, EZ472UA Series, EZ473UA, EZ474UA, EZ475UA, N3100 series, N3200 series, N3300 series, N3400 series, N5100 series, N5200 series, N5300 series, N5400 series, N6190, N6195, N6300 series, N6400 series,	STANDARD

		XF series, XH series, XT series, XU155, XZ series, ZE series, ZE4900 Series, ZT series, ZT3000 Series, ZU1155, ZU1175	
	Notebook(HP)	Pavilion DV2000 Series: DV2000, DV2000T, DV2000Z, DV2001, DV2001TU, DV2001TX, DV2001XX, DV2002, DV2002TU, DV2002TX, DV2002XX, DV2003, DV2003EA, DV2003TU, DV2003TX, DV2003XX, DV2004, DV2004EA, DV2004TU, DV2004TX, DV2004XX, DV2005, DV2005EA, DV2005TU, DV2005TX, DV2005XX, DV2006, DV2006EA, DV2006TU, DV2006TX, DV2006XX, DV2007, DV2007EA, DV2007TU, DV2007TX, DV2008, DV2008EA, DV2008TU, DV2008TX, DV2009, DV2009EA, DV2009TU, DV2009TX, DV2009XX, DV2010, DV2010EA, DV2010TU, DV2010TX, DV2011, DV2011EA, DV2011TU, DV2011TX, DV2012, DV2012EA, DV2012TU, DV2012TX, DV2013, DV2013EA, DV2013TU, DV2013TX, DV2014, DV2014EA, DV2014TU, DV2014TX, DV2015, DV2015EA, DV2015NR, DV2015TU, DV2015TX, DV2016, DV2016EA, DV2016TU, DV2016TX, DV2017, DV2017EA, DV2017TU, DV2017TX, DV2018, DV2018EA, DV2018TU, DV2018TX, DV2019, DV2019EA, DV2019TU, DV2019TX, DV2020, DV2020CA, DV2020EA, DV2020TU, DV2020TX, DV2020US, DV2021, DV2021TU, DV2021TX, DV2022, DV2022TU, DV2023, DV2023TU, DV2024, DV2024TU, DV2024TX, DV2025, DV2025LA, DV2025TU, DV2025TX, DV2026, DV2026TU, DV2026TX, DV2027, DV2027TU, DV2027TX, DV2028, DV2028EA, DV2028TU, DV2028TX, DV2029, DV2029EA, DV2029TU, DV2029TX, DV2030, DV2030EA, DV2030TU, DV2030TX, DV2031, DV2031EA, DV2031TU, DV2031TX, DV2032, DV2032EA, DV2032TU, DV2032TX, DV2033, DV2033EA, DV2033TU, DV2033TX, DV2034, DV2034EA, DV2034TU, DV2034TX, DV2035, DV2035EA, DV2035LA, DV2035TU, DV2035TX, DV2035US, DV2036, DV2036EA, DV2036TU, DV2036TX, DV2037, DV2037TU, DV2037TX, DV2037US, DV2038, DV2038TU, DV2038TX, DV2039, DV2039TU, DV2039TX, DV2040, DV2040CA, DV2040TU, DV2040TX,	<u>STANDARD</u>

		DV2040US, DV2041, DV2041TU, DV2041TX, DV2042, DV2042TU, DV2042TX, DV2043, DV2043TU, DV2043TX, DV2044, DV2044TU, DV2044TX, DV2045, DV2045EA, DV2045TU, DV2046, DV2046TU, DV2046TX, DV2047, DV2047CL, DV2047TX, DV2048, DV2048TX, DV2049, DV2049TX, DV2050, DV2050TX, DV2050US, DV2053, DV2053EA, DV2054, DV2054EA, DV2055, DV2055EA, DV2056, DV2056EA, DV2057, DV2057EA, DV2058, DV2058EA, DV2064, DV2064EA, DV2065, DV2065EA, DV2080, DV2080EA, DV2081, DV2081EA, DV2082, DV2082EA, DV2083, DV2083EA, DV2084, DV2084EA, DV2085, DV2085EA, DV2088, DV2088XX, DV2095, DV2095EA, DV2097, DV2097EA, DV2098, DV2098EA, DV2099, DV2099EA	
	Notebook(HP)	Pavilion DV4000 Series: DV4000, DV4000 CTO, DV4000LA, DV4000XX, DV4001AP, DV4001EA, DV4001XX, DV4002AP, DV4003AP, DV4004AP, DV4004XX, DV4005AP, DV4005US, DV4005XX, DV4006AP, DV4006XX, DV4007AP, DV4007XX, DV4008AP, DV4009AP, DV4010AP, DV4011AP, DV4012AP, DV4013AP, DV4014AP, DV4014EA, DV4015AP, DV4015CL, DV4015EA, DV4016AP, DV4016EA, DV4017AP, DV4017EA, DV4018AP, DV4018CL, DV4018EA, DV4019AP, DV4019EA, DV4020AP, DV4020EA, DV4021AP, DV4021EA, DV4022AP, DV4022EA, DV4023AP, DV4023EA, DV4024AP, DV4024EA, DV4025AP, DV4025EA, DV4026AP, DV4027EA, DV4029EA, DV4030CA, DV4030EA, DV4030US, DV4031EA, DV4040CA, DV4040EA, DV4040US, DV4043EA, DV4045EA, DV4046EA, DV4049EA, DV4050EA, DV4051EA, DV4052EA, DV4054EA, DV4056EA, DV4057EA, DV4060EA, DV4070EA, DV4073EA, DV4075EA, DV4078EA, DV4080EA, DV4085EA, DV4086EA	STANDARD
	Notebook(HP)	Pavilion DV1000 Series: DV1000, DV1000T, DV1001AP, DV1001xx, DV1002AP, DV1002xx, DV1003AP, DV1004AP, DV1005AP, DV1005EA, DV1006AP, DV1006EA, DV1007AP, DV1007EA, DV1008AP, DV1008EA, DV1009AP, DV1009xxDV1010AP, DV1010CA DV1010US, DV1010xx,	STANDARD

		DV1011AP, DV1011EA, DV1012AP, DV1012LA, DV1013AP, DV1013xx, DV1014AP, DV1014LA, DV1015AP, DV1015LA, DV1016AP, DV1016LA, DV1017AP, DV1018AP, DV1019AP, DV1019EADV1020AP, DV1020EA, DV1021AP, DV1022AP, DV1023AP, DV1023EA, DV1024AP, DV1024LA, DV1025AP, DV1025LA, DV1026AP, DV1027AP, DV1028AP, DV1029AP, DV1030AP, DV1030EA, DV1031AP, DV1032AP, DV1033AP, DV1034AP, DV1035AP, DV1036AP, DV1037AP, DV1038APDV1040CA, DV1040US, DV1042QV, DV1042xx, DV1044LA, DV1044xx, DV1045EA, DV1045LA, DV1049CL, DV1049EA, DV1055EA, DV1055xx, DV1057EA, DV1057xx, DV1060us, DV1060xx, DV1061EA, DV1061xx, DV1063EA, DV1064EA, DV1065EA, DV1065US, DV1066EA, DV1067EA, DV1068EA, DV1069EA, DV1071EA, DV1071US, DV1074EA, DV1075EA, DV1100, DV1101AP, DV1102AP, DV1103AP, DV1104AP, DV1105AP, DV1105EA, DV1106AP, DV1106EA, DV1107AP, DV1107EA, DV1108AP, DV1108EA, DV1109AP, DV1109EA DV1110AP, DV1110EA, DV1111AP, DV1111EA, DV1112AP, DV1112EA, DV1113AP, DV1113EA, DV1114AP, DV1114EA, DV1115AP, DV1115LA, DV1116AP, DV1116EA, DV1117AP, DV1117LA, DV1118AP, DV1119AP DV1120AP, DV1120US, DV1121AP, DV1122AP, DV1123AP, DV1124AP, DV1125AP, DV1125EA, DV1125LA, DV1125xx, DV1126AP, DV1127AP, DV1128AP, DV1129AP, DV1130AP, DV1130CA, DV1130EA, DV1130US, DV1131AP, DV1131EA, DV1132AP, DV1132EA, DV1133AP, DV1133WM, DV1134AP, DV1135AP, DV1135EA, DV1135LA, DV1136AP, DV1136EA, DV1137AP, DV1137EA, DV1138AP, DV1138EA, DV1139AP, DV1139EA DV1140AP, DV1140EA, DV1142EA, DV1143EA, DV1145AP, DV1145EA, DV1150US, DV1150xx, DV1152EA, DV1153EA, DV1154EA, DV1155EA, DV1156CL, DV1156EA, DV1159EA, DV1159xx, DV1160EA, DV1160xx, DV1167EA, DV1168EA, DV1170AP, DV1170CA, DV1170EA, DV1170US, DV1175EA, DV1175US, DV1180EA, DV1180US, DV1190EA, DV1190US, DV1200, DV1206CL, DV1207CL, DV1210US, DV1210xx, DV1215US, DV1215WM, DV1217US, DV1217xx, DV1220EA, DV1220US, DV1224EA, DV1224US,	
--	--	--	--

		DV1225CA, DV1225EA, DV1227, DV1227xx, DV1230EA, DV1230xx, DV1240CA, DV1240US, DV1245CL, DV1245EA, DV1249EA, DV1249xx, DV1250EA, DV1250US, DV1251EA, DV1252EA, DV1253EA, DV1254EA, DV1255EA, DV1255xx, DV1258EA, DV1259EA, DV1260EA, DV1261EA, DV1262EA, DV1263EA, DV1265EA, DV1265xx, DV1266EA, DV1267EA, DV1270EA, DV1270xx, DV1272EA, DV1272xx, DV1275EA, DV1275xx, DV1280EA, DV1280xx, DV1281EA, DV1281xx, DV1300, DV1301AP, DV1301xx, DV1302AP, DV1302xx, DV1303AP, DV1304AP, DV1305AP, DV1306AP, DV1307AP, DV1308AP, DV1309AP, DV1309xx, DV1310AP, DV1310US, DV1311AP, DV1311SE, DV1312AP, DV1313AP, DV1314AP, DV1314xx, DV1315AP, DV1315CL, DV1316AP, DV1316xx, DV1317AP, DV1317LA, DV1318AP, DV1319AP, DV1321AP, DV1322AP, DV1323AP, DV1324AP, DV1325AP, DV1325EA, DV1326LA, DV1326US, DV1327AP, DV1328AP, DV1329AP, DV1329xxDV1330AP, DV1330BR, DV1330CA, DV1330xx, DV1331AP, DV1331EA, DV1331SE, DV1331US, DV1332AP, DV1332xx, DV1333EA, DV1333xx, DV1335LA, DV1335xx, DV1338AP, DV1338xx, DV1340BR, DV1340US, DV1341AP, DV1342AP, DV1343AP, DV1344AP, DV1345AP, DV1346AP, DV1347AP, DV1348AP, DV1349AP, DV1350AP, DV1351AP, DV1351EA, DV1352AP, DV1352EA, DV1353AP, DV1353EA, DV1355AP, DV1355EA, DV1356AP, DV1356EA, DV1357AP, DV1357EA, DV1358AP, DV1358EA, DV1359AP, DV1359EA, DV1360AP, DV1361AP, DV1361EA, DV1361xx, DV1362EA, DV1362TU, DV1365EA, DV1365xx, DV1366EA, DV1366xx, DV1367EA, DV1367xx, DV1399EA, DV1399xx, DV1400, DV1410, DV1410US, DV1410XX, DV1411, DV1411SE, DV1411XX, DV1420, DV1420CA, DV1420US, DV1427, DV1427US, DV1427XX, DV1430, DV1430US, DV1430XX, DV1432, DV1432US, DV1432XX, DV1439, DV1439US, DV1439XX, DV1440, DV1440CA, DV1440US, DV1442, DV1442EA, DV1444, DV1444EA, DV1445, DV1445EA, DV1446, DV1446EA, DV1447, DV1447EA, DV1448, DV1448EA, DV1449, DV1449EA, DV1450, DV1450EA, DV1451, DV1451EA,	
--	--	---	--

		DV1452, DV1452EA, DV1473, DV1473EA, DV1474, DV1474EA, DV1475, DV1475EA, DV1489, DV1489EA, DV1500, DV1510, DV1510CA, DV1510US, DV1515, DV1515CL, DV1515XX, DV1519, DV1519US, DV1519XX, DV1520, DV1520CA, DV1520US, DV1530, DV1530CA, DV1530US, DV1532, DV1532US, DV1532XX, DV1540, DV1540CA, DV1540US, DV1550, DV1550SE, DV1550XX, DV1580, DV1580SE, DV1580XX, DV1600, DV1610, DV1610US, DV1610XX, DV1620, DV1620US, DV1620XX, DV1622, DV1622NR, DV1629, DV1629US, DV1629XX, DV1635, DV1635CA, DV1635XX, DV1648, DV1648US, DV1650, DV1650CA, DV1650US, DV1657, DV1657CL, DV1658, DV1658US, DV1659, DV1659US, DV1659XX, DV1660, DV1660CA, DV1680, DV1680CA, DV1680US, DV1699, DV1699US, DV1699XX	
	Notebook(HP)	Pavilion DV4100 Series: DV4100, DV4100 CTO, DV4101AP, DV4102AP, DV4102EA, DV4103AP, DV4103EA, DV4104AP, DV4105AP, DV4106AP, DV4107AP, DV4108AP, DV4108EA, DV4109AP, DV4109EA, DV4110AP, DV4110EA, DV4111AP, DV4112AP, DV4113AP, DV4113EA, DV4114AP, DV4115AP, DV4115EA, DV4116AP, DV4117AP, DV4118AP, DV4120AP, DV4121AP, DV4122AP, DV4122EA, DV4123AP, DV4124AP, DV4124EA, DV4125AP, DV4125EA, DV4125US, DV4126AP, DV4126EA, DV4127AP, DV4128AP, DV4128EA, DV4129AP, DV4129EA, DV4129US, DV4130AP, DV4130EA, DV4130US, DV4131EA, DV4134EA, DV4135, DV4135EA, DV4136EA, DV4137EA, DV4138EA, DV4139EA, DV4140EA, DV4141EA, DV4142EA, DV4143EA, DV4144EA, DV4145EA, DV4146EA, DV4148EA, DV4149EA, DV4150CA, DV4150EA, DV4150US, DV4151EA, DV4152EA, DV4153EA, DV4154EA, DV4155CL, DV4155EA, DV4155US, DV4156EA, DV4157EA, DV4158EA, DV4159EA, DV4160EA, DV4161EA, DV4162EA, DV4163EA, DV4164EA, DV4165CL, DV4165EA, DV4170CA, DV4170US, DV4174EA, DV4176EA, DV4178EA, DV4182EA, DV4199EA	STANDARD
	Notebook(HP)	DV4200 Series: DV4200, DV4200	STANDARD

		<p>CTO, DV4200EA, DV4201EA, DV4201TU, DV4201TX, DV4201XX, DV4202EA, DV4202TU, DV4202TX, DV4202XX, DV4203EA, DV4203TU, DV4203TX, DV4203XX, DV4204EA, DV4204TU, DV4204TX, DV4205EA, DV4205TU, DV4205TX, DV4206EA, DV4206TU, DV4206TX, DV4207EA, DV4207TU, DV4207TX, DV4208EA, DV4208TX, DV4209TX, DV4210TX, DV4211TX, DV4212TX, DV4213EA, DV4213TX, DV4214TX, DV4215TX, DV4216EA, DV4216TX, DV4217CL, DV4217TX, DV4218EA, DV4218TX, DV4219TX, DV4220TX, DV4221TX, DV4222TX, DV4223CL, DV4223EA, DV4223TX, DV4224EA, DV4224TX, DV4225EA, DV4225NR, DV4226EA, DV4226TX, DV4227EA, DV4230US, DV4231EA, DV4232EA, DV4234EA, DV4235EA, DV4236EA, DV4241EA, DV4243EA, DV4245EA, DV4246EA, DV4250CA, DV4250EA, DV4250US, DV4251EA, DV4253EA, DV4253US, DV4254EA, DV4257US, DV4261EA, DV4264EA, DV4266EA, DV4268EA, DV4269EA, DV4269US, DV4270CA, DV4270EA, DV4270US, DV4271EA, DV4272EA, DV4272US, DV4273EA, DV4275EA, DV4275NR, DV4276EA, DV4277EA, DV4280EA, DV4282EA, DV4283EA, DV4284EA, DV4285EA, DV4287EA, DV4288EA, DV4289EA, DV4290EA, DV4291EA, DV4294EA, DV4295EA, DV4296EA</p>	
	Notebook(HP)	<p>Pavilion DV4300 Series: DV4300, DV4302EA, DV4304EA, DV4305EA, DV4305US, DV4306EA, DV4307CA, DV4307CL, DV4308WM, DV4309EA, DV4310US, DV4312EA, DV4315EA, DV4318EA, DV4320US, DV4321EA, DV4322EA, DV4324EA, DV4325EA, DV4326EA, DV4327EA, DV4330CA, DV4330US, DV4334EA, DV4335EA, DV4335NR, DV4336EA, DV4337EA, DV4339EA, DV4340EA, DV4342EA, DV4344EA, DV4346EA, DV4348EA, DV4350EA, DV4351EA, DV4353EA, DV4354EA, DV4356EA, DV4357EA, DV4358EA, DV4360EA, DV4363EA, DV4364EA, DV4365EA, DV4367EA, DV4368EA, DV4376EA, DV4378EA, DV4379EA, DV4381EA, DV4383EA, DV4384EA, DV4385EA, DV4386EA, DV4388EA, DV4391EA, DV4392EA, DV4394EA, DV4395EA, DV4396EA, DV4398EA</p>	STANDARD
	Notebook(HP)	<p>Pavilion DV4400 Series: DV4400,</p>	STANDARD

		DV4400 CTO, DV4401TU, DV4401XX, DV4402TU, DV4405NR, DV4410CA, DV4410US, DV4419US, DV4420CA, DV4420EA, DV4420US, DV4430EA, DV4435EA, DV4440EA, DV4445EA, DV4450EA	
	Notebook(HP)	NC2400, NC4400, NC6120, NC6140, NC6320, NC6400, NC8430, NW8440, NW9440, NX6110, NX6115, NX6125, NX7300, NX74000	Optional
	PDA	H1900, H1910, H3100, H3600, H3630, H3635, H3650, H3670, H3800, H3900, H3950, H3955, H5400, H5450, H5455, H5555, HW6500, HW6515	<u>STANDARD</u>
	PDA	rx5000, rx5370, rx5700, rx5730, rx5900, rx5915, rx5935	<u>STANDARD</u>
	PDA	JORNADA: 540 series, 560 series, 928 Series	Optional
HTC	Smart Phone	Athena, Cingular 8525, Dopod 818Pro Cingular 8125, Dopod 818XDA Trion, Dopod 838, Dopod 838 Pro, Dopod 838Pro, Dopod 900, Dopod 9000, Dopod CHT9000, Excalibur, HTC Magician, HTC TyTN, HTC Wizard, Hermes, MDA Compact, MDA Pro, MDA Vario 2, MDA Vario II, MDAVario, O2 Xda Atom, O2Trion VPA V1605, Orange SPV M3100, Orange SPV M600Xda Exec, Qtek 9000, Qtek 9100, Qtek 9600, Qtek S200, Qtek s100, SMT5600, SPV M3100, SPV M5000, Sprint PPC-6700, Tytn, VPA Compact 3, VPA Compact II, VPA IV XdaII Mini, Verizon XV6700, Vodafone 1605, XDA Atom ExecXDA Neo, XDA Mini Pro, XDA Mini S, i-mate JAM, i-mate JAMin, i-mate JASJAM, i-mate JASJAR, imate K Jam	Optional
i-mate	Mobile Phones	JAM, JASJAM, JASJAR, KJAM, SP3, SP3i, SP5	Optional
IBM	Notebook	ThinkPad: 355, 600E, 600X, 700, 755, 760, 765, 770E, 770ED, 770X, 770Z, A series, R series, Transnote, X series	<u>STANDARD</u>
	Notebook	ThinkPad: 310, 310D, 310E, 310ED	<u>STANDARD</u>

	Notebook	i series, 1400 2611-xxx, 1500 2611-xxx	<u>STANDARD</u>
Initial	Portable DVD Players	DVD-5820, DVD-680P, DVD-800P, DVD-9510, IDM-1250, IDM-1731, IDM-1810, IDM-750DX, IDM-830, IDM-9530, IDM-9820	<u>STANDARD</u>
Insignia	Portable DVD Players	IS-series, NS-8PDVD, PD720, PDCA102702	<u>STANDARD</u>
Jabra	Bluetooth Headset	BT200, BT250, BT250v	<u>STANDARD</u>
JVC	Camcorders	G Series: GR-D240, GR-D245, GR-D247, GR-D250, GR-D270, GR-D271, GR-D275, GR-D290, GR-D295, GR-D295US, GR-D450, GR-DF420, GR-DF420EX, GR-DF425, GR-DF430US, GR-DF450, GR-DF450U, GR-DF450US, GR-DF470, GR-DF470US, GR-DF520, GR-DF540, GR-DF540EX, GR-DF550, GR-DF550US, GR-DF565, GR-DF570, GR-DF590, GR-X5, GR-X5E, GR-X5EX, GR-X5US, GZ-D240, GZ-D270, GZ-DF470, GZ-MG155, GZ-MG20, GZ-MG20AA, GZ-MG20E, GZ-MG20EK, GZ-MG20EX, GZ-MG20U, GZ-MG20US, GZ-MG21, GZ-MG21AA, GZ-MG21E, GZ-MG21EK, GZ-MG21EX, GZ-MG21U, GZ-MG24, GZ-MG24AA, GZ-MG24E, GZ-MG24EK, GZ-MG24EX, GZ-MG24U, GZ-MG26, GZ-MG26AA, GZ-MG26E, GZ-MG26EK, GZ-MG26EX, GZ-MG26U, GZ-MG27, GZ-MG27AA, GZ-MG27E, GZ-MG27EK, GZ-MG27EX, GZ-MG27U, GZ-MG30, GZ-MG30AA, GZ-MG30E, GZ-MG30EK, GZ-MG30EX, GZ-MG30U, GZ-MG30US, GZ-MG35, GZ-MG35U, GZ-MG36, GZ-MG36AA, GZ-MG36E, GZ-MG36EK, GZ-MG36EX, GZ-MG36U, GZ-MG37, GZ-MG37AA, GZ-MG37E, GZ-MG37EK, GZ-MG37EX, GZ-MG37U, GZ-MG39, GZ-MG39AA, GZ-MG39E, GZ-MG39EK, GZ-MG39EX, GZ-MG39U, GZ-MG40, GZ-MG40AA, GZ-MG40E, GZ-MG40EK, GZ-MG40EX, GZ-MG40U, GZ-MG40US, GZ-MG50, GZ-MG505, GZ-MG505AA, GZ-MG505E, GZ-MG505EK, GZ-MG505EX, GZ-MG505U, GZ-MG50AA, GZ-MG50E, GZ-MG50EK, GZ-MG50EX, GZ-MG50U, GZ-MG50US, GZ-MG60, GZ-MG60AA, GZ-MG60E, GZ-MG60EK, GZ-MG60EX, GZ-MG60US, GZ-MG67, GZ-MG67AA,	Optional

		GZ-MG67E, GZ-MG67EK, GZ-MG67EX, GZ-MG67U, GZ-MG70, GZ-MG70AA, GZ-MG70E, GZ-MG70EK, GZ-MG70EX, GZ-MG70U, GZ-MG70US, GZ-MG77, GZ-MG77AA, GZ-MG77E, GZ-MG77EK, GZ-MG77EX, GZ-MG77U	
	Camcorders	GR-D30US, GR-D70US, GR-D90US, GR-D500US, GR-DVL520U, GR-DVL820U	STANDARD
	Camcorders	GR-DV3000U	STANDARD
	CD/MP3 Players	EX CDMP3, XL-PM30	STANDARD
Kawasaki	Portable DVD Players	PVS-1665, PVS1080, PVS10921, PVS1102, PVS166w, PVS1965	STANDARD
Kodak	Digital Cameras	EasyShare: DC200, DC200+, DC210, DC210+, DC215, DC220, DC240, DC2500, DC260, DC265, DC280, DC290, DC3200, DC3400, DC4800, DC5000	STANDARD
	Digital Cameras	EasyShare: CX4200, CX4230, DX4330, DX6340	STANDARD
	Digital Cameras	EasyShare: CX7330, CX7430, DX6490, DX7590, DX7630, LS443, LS743	STANDARD
Konica Minolta	Digital Cameras	DiMAGE: 5, 7, 2300, 2330, E201, EX1500, S304, S404, S414, X	STANDARD
	Digital Cameras	DiMAGE: A1, E223, X31, Z1	STANDARD
Kyocera	Digital Cameras	Finecam S3	STANDARD
	Mobile Phones	1100, 1135, 2000, 2100, 2200, 2235, 2300, 3200, 3225, 4NE1, 7135, Blade, KE400, Phantom, Rave	STANDARD
	Mobile Phones	414, 424, 433, 434, 440, 444, 490, 493, 494, 1135, 2027, 2035, 2035a, 2119, 2119b, 2135, 2235, 2255, 2325, 2345, 3225, 3245, 3250, 7135, K490, K493, K494, KE413, KE413C, KE414, KE414C, KE423, KE423C, KE424, KE424C, KE433, KE434, KE434C, KE440, KE444, KX1, KX1v, KX2, KX413, KX413C, KX414, KX414C, KX423, KX423C, KX424, KX424C, KX433, KX434, KX434C, KX440, KX444, KX9, Koi	STANDARD

Lenovo	Notebook	ThinkPad: R60, R60e, R61, R61e, R61i Series	Optional
	Notebook	ThinkPad: T60, T60p, T61 Series	Optional
	Notebook	ThinkPad: X60, X60s, X61, X61s Series	Optional
	Notebook	ThinkPad: Z60, Z60m, Z60t Series	Optional
	Notebook	3000: C100, C200 Series	Optional
	Notebook	3000: N100, N200 Series	Optional
	Notebook	3000: V100, V200 Series	Optional
LG	Mobile Phones	AX275, Chocolate, LX150, VX8500, VX8600, VX8700, VX9400, VX9900	Optional
	Mobile Phones	AX355, AX390, AX490, LX350, LX535, LX550, MM-535, PM-225, PM-325, UX355, VI-125, VX3200, VX3300, VX3400, VX3450, VX4650, VX4700, VX4750, VX5200, VX5300, VX6100, VX7000, VX8000, VX8100, VX8300, VX9800	Optional
	Mobile Phones	5400, 5400A, A7110, C1300, C1400, C1500, C2000, CE500, CG225, CG300, CU320, CU400, CU500, F7200, F9100, F9200, G4010, G4011, G4015, G4020, G4050, Kyocera SE44, L1100, L1150, L1200, L1400, L1400i, LX-5550, LX1200, SE47, V5 Slider, VI5225, VX-4500, VX-4600, VX-5550, VX-6000, VX-7000	Optional
	Mobile Phones	1010, 4NE1, 5350, DM510, SP510, TM510, TP1100, VX10, VX2000, VX3100, VX4400, VX9000	Optional
Magnavox	CD/MP3 Players	MPC220SL, MPC225SL	<u>STANDARD</u>
	Portable DVD Players	MPD0920, MPD700, MPD720, MPD820, MPD850	<u>STANDARD</u>
Marantz	Field Recorder	PMD660	<u>STANDARD</u>
Memorex	Portable DVD Players	MM5000, MM7000, MM8000	<u>STANDARD</u>
Mintek	Portable DVD Players	1710, 1760, 5830, DVD-5830, MDP-1020, MDP-1030, MDP-1760, MDP-1770, MDP-1810, MDP-1815, MDP-5830, MDP-5860, MDP-5861	<u>STANDARD</u>

Motorola	Bluetooth Headset	H3, H500, H605, H700	Optional
	Mobile Phones	A1200, E680, E680i, L2, L6, MPx200, PEBL U6, PEBL V6, Q, RAZR V3, SLVR L6, SLVR L7, SLVR V8, V190, V195, V235, V270, V280, V3, V360, V3c, V3i, V3x, V6, V8, a688	Optional
Mustek	Portable DVD Players	MP100, PL408H, PL510, PL608	<u>STANDARD</u>
NEC	Notebook	2400CD, 500, 550, 2400, 2405, 2405CD, 2430, 2430CD, 2435C, 2435CD, 2500, 2500CD, 2505, 2530, 5000, 5060, 5060X, 5069, 5080, 5080X, 550D, JXi, JZi, NX, SXi, VX, VXiseries	<u>STANDARD</u>
Neoware	Notebook	M100	<u>STANDARD</u>
Nextel	Mobile Phones	i205, i215, i265, i275, i285, i305, i315, i325, i325 IS, i355, i415, i450, i530, i560, i580, i605, i615, i670, i710, i730, i733, i760, i830, i836, i850, i855, i860, i870, i875, i920, i930, i970	Optional
	Mobile Phones	i500, i550, i700	<u>STANDARD</u>
Nikon	Digital Cameras	Coolpix 100, 300, 600, 700, 750, 775, 800, 880, 885, 900, 950, 990, 995, 2000, 2100, 2200, 2500, 3100, 3200, 3700, 4100, 4300, 4500, 5000, 5200, 5700, 8700, 5400	<u>STANDARD</u>
	Digital Cameras	Coolpix: 5400	<u>STANDARD</u>
Nintendo	Handheld Games	Game Boy® Color	<u>STANDARD</u>
	Handheld Games	DS, Gameboy Advanced, Gameboy SP	Optional
	Handheld Games	DS Lite	Optional
Nokia	Mobile Phones	252, 282, 1100, 1221, 1260, 1261, 2260, 2270, 2285, 3100, 3200, 3205, 3220, 3285, 3300, 3360, 3361, 3390, 3395, 3520, 3560, 3570, 3590, 3595, 3600, 3620, 3650, 3660, 5100, 5120, 5125, 5140, 5160, 5165, 5170i, 5180, 5185i, 5190, 6010, 6030, 6100, 6120, 6160, 6161, 6162, 6185i, 6190, 6200, 6225, 6230, 6310i, 6340, 6340i, 6360, 6370, 6385,	Optional

		6555, 6560, 6590, 6590i, 6600, 6610, 6620, 6682, 6800, 6820, 7160, 7190, 7210, 7250i, 7660, 8260, 8265, 8265i, 8270, 8290, 8390, 8800 & 9290, 8890, 9300, 9500	
	Mobile Phones	2865i, 3155i, 6102i, 6155i, 6165i, 6265i, 770, 2865, 3250, 6070, 6101, 6102, 6103, 6111, 6125, 6126, 6131, 6133, 6136, 6233, 6270, 6280, 7360, 7370, E60, E61, E62, E65, N70, N71, N72, N73, N80, N90, N91, N918GB, N92, N93, N95	Optional
O2	Mobile Phones	Atom, CH-06, Exec, Mini, Neo, Trion, XDA mini, Xda Stealth, mini S	Optional
Olympus	Digital Cameras	C-2000Z, C-2020Z, C-2030, C-2040Z, C-2100UZ, C-211Z, C-25000Z, C-2500L, C-3000, C-3020Z, C-3030Z, C-3040Z, C-320L, C-340L, C-340R, C-40, C-4000Z, C-4040Z, C-40Z, C-5050Z, C-5060, C-50Z, C-700UZ, C-720UZ, C-730UZ, C-740, C-740UZ, C-765, D-200L, D-220L, D-320L, D-340L, D-340R, D-360L, D-370, D-380, D-400Z, D-40Z, D-450Z, D-460Z, D-500L, D-510Z, D-520Z, D-550Z, D-560Z, D-600L, D-620L, E-10	<u>STANDARD</u>
	Digital Cameras	Stylus 300, 410	<u>STANDARD</u>
	Digital Cameras	Brio D-100, D-150, D-230	<u>STANDARD</u>
Palm	PDA	Zire: 31, 72, 72S	<u>STANDARD</u>
	PDA	Tungsten: E	<u>STANDARD</u>
	PDA	m100, m105, m125, m130, m500, m505, m515	Optional
	PDA	Tungsten: C, T, T2, T3, W	Optional
	PDA	i705	Optional
	PDA	V, Vx, VxLE, Zire 71	Optional
	PDA	III, IIIc, IIIe, IIIx, IIIxe, VII, VIIx	Optional
	PDA	LifeDrive	Optional
	PDA	Tungsten: E2, T5, TX	Optional

	Smart Phone	90, 180, 270, 300, Treo 600	Optional
	Smart Phone	Treo: 650, 700p, 700w	Optional
Panasonic	Camcorders	Palmcorder: PV-DV103, PV-DV203, PV-DV402, PV-DV52, PV-DV53, PV-DV701, PV-DV910D, PV-GS9, PV-L353, PV-L452	<u>STANDARD</u>
	CD/MP3 Players	SL-MP70, SL-SV550, SL-SX321C, SL-SX360, SL-SX420	<u>STANDARD</u>
	Digital Cameras	Lumix: DBC-FZ10S, DMC-FZ10K	<u>STANDARD</u>
	Notebook	Toughbook: CF-R1, CF-T1, CFT2	<u>STANDARD</u>
	Notebook	CF-M34, CF-V25, CF-V41, CF01, CF11, CF17, CF170, CF25, CF27, CF270, CF28, CF33, CF34, CF35, CF37, CF370, CF380, CF41, CF45, CF47, CF48, CF50, CF61, CF62, CF63, CF71	<u>STANDARD</u>
	Portable DVD Players	DVD LS-5, DVD LS-50, DVD LS-90, DVD-L10, DVD-L50, DVD-LA-95, DVD-LA85, DVD-LA95, DVD-LV55, DVD-LV57, DVD-LV60, DVD-LV70, DVD-LV75, DVD-LX8, DVD-LX9, DVD-LX9PP-S, DVD-PA65, DVD-PV40, DVD-PV55	<u>STANDARD</u>
	Portable DVD Players	DVD-LS85, DVD-LS87, DVD-LS90, DVD-LS91, DVD-LS93, DVD-LX95	Optional
Pentax	Digital Cameras	Optio 330RS, 430RS	<u>STANDARD</u>
Philips	Portable DVD Players	PET1002, PET710, PET737	<u>STANDARD</u>
Pioneer	Portable DVD Players	PDV-10, PDV-20, PDV-LC10, PDV-LC10SR, PDV-LC20, PDV-LC20BA	<u>STANDARD</u>
Plantronics	Bluetooth Headset	M1000, M2300, M2500, M3000, M3500	<u>STANDARD</u>
Polaroid	Portable DVD Players	PDM-0711, PDM-0722, PDM-0723, PDM-0742, PDM-0752, PDM-0822BD, PDM-0824, PDM-2727, PDV-0700, PDV-0701A, PDV-0707N, PDV-0713B, PDV-0750, PDV-0800, PDV-0820T, PDV-0823A, PDV-088PT, PDV-1002A, PDV-1008N, PDV-7070N, PDV-713B, PXD-0758	<u>STANDARD</u>
Premier	Digital Cameras	DC2300, DC3460	<u>STANDARD</u>

PreSonus	Field Recorder	FIREBOX, FIREPOD, Inspire 1394	<u>STANDARD</u>
Quasar	Camcorders	VMD-52	<u>STANDARD</u>
RCA	AV Jukebox	Lyra RD2760, RD2780	Optional
	CD/MP3 Players	Lyra RD2201A	<u>STANDARD</u>
	Portable DVD Players	5400P, DCR600N, DCR605N, DCR608N, DCR612N, DCR618N, DCR622N, DRC630N, RC5400P	<u>STANDARD</u>
Ricoh	Digital Cameras	RDC-2, RDC-2E, RDC-300, RDC-300Z, RDC-4200, RDC-4300, RDC-5000, RDC-5300	<u>STANDARD</u>
Rio (by SONICblue)	CD/MP3 Players	Rio Volt SP50, SP150	<u>STANDARD</u>
Samsung	Camcorders	SC-L810	Optional
	Digital Cameras	Digimax 350SE	<u>STANDARD</u>
	Mobile Phones	A200, A288, Q1688, S308, T408, T508	Optional
	Mobile Phones	i500, i505, i550, i600, i700, i730, i830	Optional
	Mobile Phones	A460, A500, A600, A620, A660, A680, N240, N400, VGA 1000, VGA-1000, VI660, VM A680, VM-A680	<u>STANDARD</u>
	Mobile Phones	2510, A503, Blackjack i607, D520, D800, D807, D820, Drift, E870, E900, Helio, M610, Nimbus, P300, SYNC A707, Stripe T329, T509, T519, T629, T809, U420, U710, U740, X820, Z400	Optional
	Mobile Phones	A200, A288, A300, A310, A420, A530, A560, A570, A580, A610, A640n, A650, A660, A670, A680, A700, A740, A760, A790, A800, A820, A840, A880, A890, A900, A920, A930, A940, A950, A990, C207, C225, C417, D307, D347, D357, D357s, D407, D410, D415, E105, E315, E316, E317, E330, E335, E635, E715, M500, N330, N625, P107, P209, Q1688, R225, R225M, S200, S300, S307, S308, T300, T309, T319, T408, T508, T609, T619, T709, T719, U340, U520, U540, U620, V205, V206,	Optional

		X105, X426, X427, X427M, X475, X495, X497, X507, ZX10, ZX20	
	Notebook	Q series: Q1, Q10, Q20, Q25, Q30, Q30 plus, Q35	Optional
	Notebook	P series: P27, P28, P28G, P29, P30, P35, P40	Optional
	Notebook	R series: R45, R50	Optional
	Notebook	X series: X05, X06, X1, X10, X10 plus, X11, X15, X15 plus, X30	Optional
	Notebook	M series: M40, M40 plus	Optional
	Notebook	MetroBook: LT, VL	Optional
	Notebook	# MPC (formerly MicronPC) TransPort series: GX, GX+, GX2, GX3, LT, VX, XT, XT2, ZX	Optional
	Notebook	VM Series: V8095CX, VM6000, VM6300, VM6300CT, VM7000, VM7550, VM7550CT, VM7600, VM7600CT, VM7650, VM7650CT, VM7650CXTD, VM7700, VM7700XTD, VM8000, VM8080, VM8080CXT, VM8090, VM8090CT, VM8090CXTD, VM8095, VM8100, VM8100CX, VM8100CXTD, VM8100XTD, VM8110XTC	Optional
	Notebook	GT Series: GT6000, GT6330, GT6330XT, GT6360, GT6360XT, GT6400, GT6400XV, GT7000, GT7700, GT8000, GT8100, GT8600, GT8600XT, GT8650, GT8650XT, GT8700, GT8700XT, GT8750, GT8750XT, GT8750XV, GT8800, GT8800XT, GT8800XV, GT8850, GT8850XT, GT8850XTD, GT8900, GT8900DXV, GT8900XTR, GT8910, GT8910KXV, GT9000, GT9000 PRO	Optional
	Portable DVD Players	DVD-L100, DVD-L200DVD-L300PA-SB100	<u>STANDARD</u>
Sanyo	Digital Cameras	VPC-AZ1, VPC-MZ1	<u>STANDARD</u>
	Mobile Phones	5400, 5500, 7200, 8100, 8200,RL-2000, RL-2500, RL-7300,VM-4500	<u>STANDARD</u>
Sharp	Camcorders	Digital Viewcam® VL-Z7U	<u>STANDARD</u>
	Portable DVD	Sharp DV-L70	<u>STANDARD</u>

	Players		
Shinco	Portable DVD Players	DVD-1520, DVD-1710, DVD-1810, DVD-710, DVD-9510, DVD-960, DVD-9610, SDP-1280, SDP-1560, SDP-1720, SDP-1731, SDP-1770, SDP-1810, SDP-1830, SDP-1910, SDP-5820, SDP-5850, SDP-5860, SDP-5861X, SDP-9530, SVD-95, SVD-951	<u>STANDARD</u>
Sony	Camcorders	DCR-SR40, DCR-SR60, DCR-SR80	Optional
	Camcorders	DCR-DVD103, DCR-DVD203, DCR-DVD403, DCR-DVD7, DCR-DVD92, DCR-HC1000, DCR-HC20, DCR-HC21, DCR-HC30, DCR-HC30E, DCR-HC32, DCR-HC40, DCR-HC40E, DCR-HC42, DCR-HC65, DCR-HC85, DCR-HC85 DCR-PC109, DCR-HC90, DCR-HE85E, DCR-IP1, DCR-IP1E, DCR-IP220, DCR-IP5, DCR-IP55, DCR-IP7BT, DCR-PC109, DCR-PC109E, DCR-PC350, DCR-PC55/B, DCR-PC55/R, DCR-PC55/S, DCR-PC55/W, DCR-TRV280, DCR-TRV480	Optional
	Camcorders	CCD-SC55, CCD-SC65, CCD-TR3000, CCD-TR3300, CCD-TR516, CCD-TR555, CCD-TR67, CCD-TR716, CCD-TR76, CCD-TR818, CCD-TR87, CCD-TR917, CCD-TR940, CCD-TRV101, CCD-TRV15, CCD-TRV215, CCD-TRV25, CCD-TRV36, CCD-TRV43, CCD-TRV46, CCD-TRV58, CCD-TRV615, CCD-TRV65, CCD-TRV66, CCD-TRV67, CCD-TRV68, CCD-TRV715, CCD-TRV75, CCD-TRV815, CCD-TRV85, CCD-TRV87, CCD-TRV88, CCD-TRV90, CCD-TRV91, CCD-TRV93, CCD-TRV95, CCD-TRV98, CCD-TRV99, DCR-HC20, DCR-HC30, DCR-HC40, DCR-HC65, DCR-HC85, DCR-IP1, DCR-IP220, DCR-IP5, DCR-IP55, DCR-IP7BT, DCR-PC10, DCR-PC109, DCR-PC7, DCR-SC100, DCR-TR7000, DCR-TRV110, DCR-TRV120, DCR-TRV130, DCR-TRV210, DCR-TRV315, DCR-TRV320, DCR-TRV5, DCR-TRV510, DCR-TRV520, DCR-TRV525, DCR-TRV7, DCR-TRV720, DCR-TRV820, DCR-TRV9, DCR-TRV900, DCR-VX1000, DCR-VX2000, DCR-VX2100, DCR-VX700	Optional
	Camcorders	AC-L200, AC-L25, AC-L25A, AC-	Optional

		L25B, CCD-TRV108, CCD-TRV118, CCD-TRV128, CCD-TRV308, CCD-TRV318, CCD-TRV328, CCD-TRV608, DCR-DVD100, DCR-DVD101, DCR-DVD200, DCR-DVD201, DCR-DVD300, DCR-PC100, DCR-PC101, DCR-PC105, DCR-PC110, DCR-PC115, DCR-PC120BT, DCR-PC330, DCR-PC9, DCR-TRV1, DCR-TRV10, DCR-TRV11, DCR-TRV140, DCR-TRV17, DCR-TRV19, DCR-TRV20, DCR-TRV22, DCR-TRV230, DCR-TRV240, DCR-TRV25, DCR-TRV250, DCR-TRV260, DCR-TRV27, DCR-TRV30, DCR-TRV310, DCR-TRV33, DCR-TRV330, DCR-TRV340, DCR-TRV350, DCR-TRV360, DCR-TRV38, DCR-TRV39, DCR-TRV460, DCR-TRV50, DCR-TRV530, DCR-TRV6, DCR-TRV70, DCR-TRV730, DCR-TRV740, DCR-TRV8, DCR-TRV80, DCR-TRV830, DCR-TRV840, DCR-TRV950	
	Camcorders	DCR-DVD103, DCR-DVD105, DCR-DVD203, DCR-DVD205, DCR-DVD305, DCR-DVD403, DCR-DVD405, DCR-DVD505, DCR-DVD7, DCR-DVD92, DCR-HC1000, DCR-HC20, DCR-HC21, DCR-HC26, DCR-HC30, DCR-HC32, DCR-HC36, DCR-HC40, DCR-HC42, DCR-HC46, DCR-HC65, DCR-HC85, DCR-HC90, DCR-HC96, DCR-IP1, DCR-IP220, DCR-IP5, DCR-IP55, DCR-IP7BT, DCR-PC1000, DCR-PC109, DCR-PC350, DCR-PC55/B, DCR-PC55/R, DCR-PC55/S, DCR-PC55/W, DCR-SR100, HDR-HC3	Optional
	CD/MP3 Players	Walkman: D-CJ01, D-EJ360, D-EJ368CK, D-FJ210, D-NE700	<u>STANDARD</u>
	Digital Cameras	Mavica FD: MVC-FD100, MVC-FD200, MVC-FD5, MVC-FD7, MVC-FD72, MVC-FD75, MVC-FD83, MVC-FD85, MVC-FD87, MVC-FD88, MVC-FD90, MVC-FD91, MVC-FD92, MVC-FD95, MVC-FD97	Optional
	Digital Cameras	Mavica CD: DSC-F707, DSC-F717, DSC-F828, DSC-S30, DSC-S50, DSC-S70, DSC-S75, DSC-S85, MVC-CD200, MVC-CD250, MVC-CD300, MVC-CD350, MVC-CD400, MVC-CD500	Optional
	Digital Cameras	Cybershot: DSC-D700, DSC-D770,	Optional

		DSC-F505, DSC-F55, DSC-P1, DSC-P2, DSC-P20, DSC-P3, DSC-P30, DSC-P31, DSC-P5, DSC-P51, DSC-P7, DSC-P71, DSC-P9	
	Digital Cameras	Mavica CD: MVC-CD1000	Optional
	Digital Cameras	Cybershot: DSC-F88, DSC-M2, DSC-P10, DSC-P12, DSC-P32, DSC-P52, DSC-P72, DSC-P8, DSC-P92, DSC-V1	Optional
	Field Recorder	DAT: PCM-M1, TCD-D100	<u>STANDARD</u>
	Handheld Games	PSP (PlayStation Portable)	<u>STANDARD</u>
	Notebook	VAIO: 81, 705, 707, 717, 719, 729, 731, 735, 748, 800, 808, 812, 818, 838, C1XW, F Series, F150, F160, F180, F190, F250, F270, F280, F290, F304, F305, F309, F340, F350, F360, F370, F390, F400, F400LT, F403, F409, F420, F430, F450, F480, F480K, F490K, F520, F540, F540K, F560, F560K, F580, F580K, F590, F590K, F630, F660, F670, F680, F690, F701, F707, F709, F709K, F801, F801A, F807, F807K, F808K, F809K, FR102, FR105, FR130, FX series, GRS series, GRX series, NV100, NV105, NV109M, NV170, NV190, NV200, NV209, NV309, NVR23, PG32, QR10, QR20, R500, R505CT, R505D, R505DT, R505J, R505T, R505TE, R505TEK, R505TS, R600HEK, R600HEP, R600HFPD, R600HMPD, R600MX, V505AP, X18, X29, X9, XE17, XE7, XG18, XG19, XG28, XG28K, XG29, XG38, XG39, XG39K, XG500, XG700, XG9, Z505, Z505FA, Z505GA, Z505GAH, Z505GAM, Z505HE, Z505HS, Z505HSK, Z505JE, Z505JEK, Z505JS, Z505JSK, Z505LE, Z505LEK, Z505LS, Z505LSK, Z505R, Z505RX, Z505S, Z505SX, Z600HEK, Z600LEK, Z600NE, Z600NEK, Z600RE, Z600TEK	<u>STANDARD</u>
	Notebook	Picturebook: C1X	<u>STANDARD</u>
	Notebook	VAIO: C1MHP, GR100, GR100K, GR114EK, GR114MK, GR114SK, GR150K, GR170K, GR200, GR200K, GR200P, GR214CP, GR214EP, GR214MP, GR215MP, GR215SP, GR250, GR250K, GR250P, GR270, GR270K, GR270P, GR290, GR290K,	<u>STANDARD</u>

		GR290P, GR300, GR314MP, GR315MP, GR370, GR390, GR414SP, S150, S150P, SR11K, SR17, SR17K, SR1K, SR21K, SR5K, SR7K, SR9G, SRX41P, SRX51P, SRX51PA, SRX51PB, TR1A, TR1AP, TR2A, TR2AP1, TR2AP3, TR3AP1, TR3AP2, V505A, V505AC, V505AXP, V505B, V505BC, V505BX, V505BXP, V505D, V505DC1, V505DC11, V505DC1P7, V505DX, V505DXP, V505EC, V505EXP, VX71P, X505, X505ZPKIT, X505ZPKIT2, Z1, Z1A, Z1AP1, Z1AP2, Z1AP3, Z1M, Z1R5P, Z1RA, Z1RAP1, Z1RAP2, Z1RAP3, Z1SP, Z1VAP, Z1WAMP, Z1WAP, Z1ZAP1, Z505AX, Z505AXP	
	Notebook (NOT COMPATIBLE)	VAIO VGN-AR290G	(NOT COMPATIBLE)
	PDA	Clie!: N790, NX60, NX70V, SJ20, SJ22, SJ33, TG50	Optional
	Portable DVD Players	DVP-FX700 DVP-FX705, DVP-FX810	<u>STANDARD</u>
Sony Ericsson	Mobile Phones	P800, P900, P910i, T608, T610, T616, T618, T628, T630, T637, T68, T68i, Z600, Z608	Optional
	Mobile Phones	D750i, J100a, J100i, J220a, J22i, J230i, K510a, K510i, K610i, K750, K750i, K790i, K800i, M600i, P990i, V630i, W300i, W550, W550i, W600, W600i, W700, W700i, W710i, W800, W800i, W810c, W810i, W850i, W900i, Z30i, Z520, Z520a, Z520i, Z525, Z525a, Z525i, Z530i, Z550i, Z710i	Optional
TomTom	GPS	GO, GO 300, GO 500, GO 510, GO 700, GO 710, GO 910, Mobile & Mobile 5, Navigator 5 Wired/Wireless, Navigator Palm, One, Rider	<u>STANDARD</u>
Toshiba	Digital Cameras	PDR-2300, PDR-3300, PDR-3310, PDR-4300, PDR-M25, PDR-M61, PDR-M65, PDR-M71, PDR-M81, PDR-T10	<u>STANDARD</u>
	Notebook	Satellite: 2450, 2450-101, 2450-101S, 2450-114, 2450-201, 2450-201 Works, 2450-202, 2450-3DY, 2450-401, 2450-5DY, 2450-A740, 2450-A750, 2450-P40, 2450-S103, 2450-S203, 2450-S303, 2450-	<u>STANDARD</u>

		S402, 2450-SP295, 2450-SP300, 2450-TMG, 2455-S3001, 2455-S305, 2455-S306, A100-S8111TD, A100-ST8211, A105-S2021, A105-S2141, A105-S4001, A105-S4004, A105-S4014, A105-S4054, A105-S4074, A105-S4084, A105-S4092, A105-S4094, A105-S4102, A105-S4104, A105-S4114, A105-S4132, A105-S4134, M100-ST5111, M100-ST5211, M105-S3001, M105-S3002, M105-S3004, M105-S3011, M105-S3012, M105-S3021, M105-S3031, M105-S3041, M105-S3064, P100-ST7211, P105-S6002, P105-S6004, P105-S6012, P105-S6014, P105-S6022, P105-S6024, P105-S6084	
	Notebook	Qosmio: E15-AV101, F15-AV201, F15-AV203, F25-AV205	STANDARD
	Notebook	Tecra: A6, A6-100, A6-102, A6-104, A6-105, A6-117, A6-124, A6-131, A6-132, A6-141, A6-143, A6-CV3, A6-EZ6311, A6-EZ6312, A6-EZ6611, A6-S513, A6-S713, A6-SP3022, A6-SP3052, A6-SP561, A6-ST3112, A7, A7-100, A7-101, A7-106, A7-107, A7-107 (SanAntonio10GC), A7-108, A7-111, A7-112, A7-114, A7-116, A7-117, A7-119, A7-201, A7-202, A7-212, A7-221, A7-222, A7-LL2, A7-S612, A7-S712, A7-SP2012, A7-SP2022, A7-SP4032, A7-ST5112	STANDARD
	Notebook	Satellite: 1000, 1005, 1100, 1200, 1605,1625, 1675, 1695, 1715, 1730, 1735,1750, 1755, 3000, 3005	STANDARD
	Notebook	Tecra: 520CDT, 550CDT, 8000, 8100, 8200, 9000, 9100, A1, A2, L2, M1, M2, S1, TE2000, TE2100, TE2300	STANDARD
	Notebook	Portege: 2000, 2010, 3500 Tablet, 3505 Tablet, 4000, 4005, 4010, 7000CT, 7010CT, 7020CT, 7140CT, 7200CT/Cte, 7220Cte, M100, M200, M205, R100	STANDARD
	Notebook	Satellite: 200, 220, 300, 310, 320, 330, 1400, 1405, 1410, 1415, 1555, 1800, 1805, 2060, 2065, 2100 series, 2200 series, 2400, 2405, 2410, 2415, 2500 series, 2600 series, 2700 series, 2800,	STANDARD

		2805, 4000 series, 4100, 5005, 5105, 5200, 5205, A10, A15, A80, A85, A85-S107, A85-S1071, A85-S1072, A85-SP107, A85-SP1072, L10, L10-SP104, L15, L15-S1041, L15-SP1041, L20, L20-SP119, L25, L25-S119, L25-S1192, L25-S1193, L25-S1194, L25-S1195, L25-S1196, L25-SP129, L25-SP139, M20, M30, M30X, M30X-1593, M30X-214, M30X-40, M30X-60, M30X-80, M30X-S114, M30X-S1592, M30X-S171, M30X-S181, M30X-S191, M30X-S221, M30X-SP114, M30X-s234, M35, M35X, M35X-114, M35X-149, M35X-S109, M35X-S111, M35X-S1141, M35X-S1142, M35X-S1143, M35X-S1492, M35X-S161, M35X-S163, M35X-S309, M35X-S311, M35X-S329, M35X-S349, M35X-SP114, M35X-SP161, M35X-SP171, M35X-SP181, M35X-SP311, M45, M45-S165, M45-S169, M55, M55-S139	
	Notebook	Satellite Pro: 430, 440, 445, 460, 465, 470, 480, 490, 520, 550, 4200, 4220, 4260, 4280, 4300, 4600, 6000, 6100, M10, M15	STANDARD
	PDA	e310, e550, e740, e755	STANDARD
	Portable DVD Players	SD-P1500, SD-P2000, SD-P2600, SDP2000, SDP2500	STANDARD
	Portable DVD Players	SD-1650, SD-1700, SD-1850, SD-KP19SN, SD-P1200, SD-P1400, SD-P1600, SD-P2600, SDP-1750	Optional
VIDLED	Light	coolLED-40, dayLED-40, warmLED-40	STANDARD
Viewsonic	PDA	V35, V37	STANDARD
Winbook	Notebook	J1, N, Si, Si 566/32, Si 566/64, Si 650 TFT, Si 700, Si 700M, Si 800 TFT, Si 800/128, Si 800CD, Si 800M, Si 850, Si 850DVD Winbook Si2 850, Si2 series, X1, X2, X4, XL, XL 300TFT, XLI, XP, XP5, Z, Z1, Z1 850	STANDARD
Zoom	Field Recorder	H4 - Handy Recorder	STANDARD
	Field Recorder	PFX-9003 Palmtop Effects Processor, PS-04 Personal Multi-Track Studio	STANDARD

Zylight	Portable Light	Z50	<u>STANDARD</u>
----------------	----------------	-----	---------------------------------